

# FRENIC-Loader4 向け アドインファイル説明書


## 1. アドイン情報

ファイル名	ad000124.cip						
アドイン名	Add-in 000124						
発行日	2022年02月17日						
適用バージョン	FRENIC-Loader4 version 1.1.0.32 以降						
内容	<p><u>概要</u></p> <p>このアドインは、下記インバータ製品に対応します。</p> <table border="1" data-bbox="545 846 1433 990"> <tr> <td>適用形式</td> <td>インバータ ROM バージョン</td> </tr> <tr> <td>FRENIC-MEGA(G2)</td> <td>0300</td> </tr> <tr> <td>FRENIC-Ace(E2)</td> <td>全て</td> </tr> </table> <p><u>注意事項</u></p> <ul style="list-style-type: none"> <li>● このアドイン(ad000124.cip)を適用する場合は、「2.インストール方法」のみ実施下さい。</li> <li>● 標準仕様品や他のアドインを適用する場合は、「3.アドインファイルの有効化・無効化」以降も併せて参照下さい。 ※ローダソフトの機能コードの新規作成や読み出し時に、意図しないインバータ ROM バージョンが適用される可能性があります。</li> </ul>	適用形式	インバータ ROM バージョン	FRENIC-MEGA(G2)	0300	FRENIC-Ace(E2)	全て
適用形式	インバータ ROM バージョン						
FRENIC-MEGA(G2)	0300						
FRENIC-Ace(E2)	全て						

## 2. インストール方法

① FRENIC-Loader 4 を起動します。


② 当社から提供されたアドインファイル“ad\*\*\*\*\*.cip”を FRENIC-Loader4 のメイン画面の任意の場所にドラッグ&ドロップします。

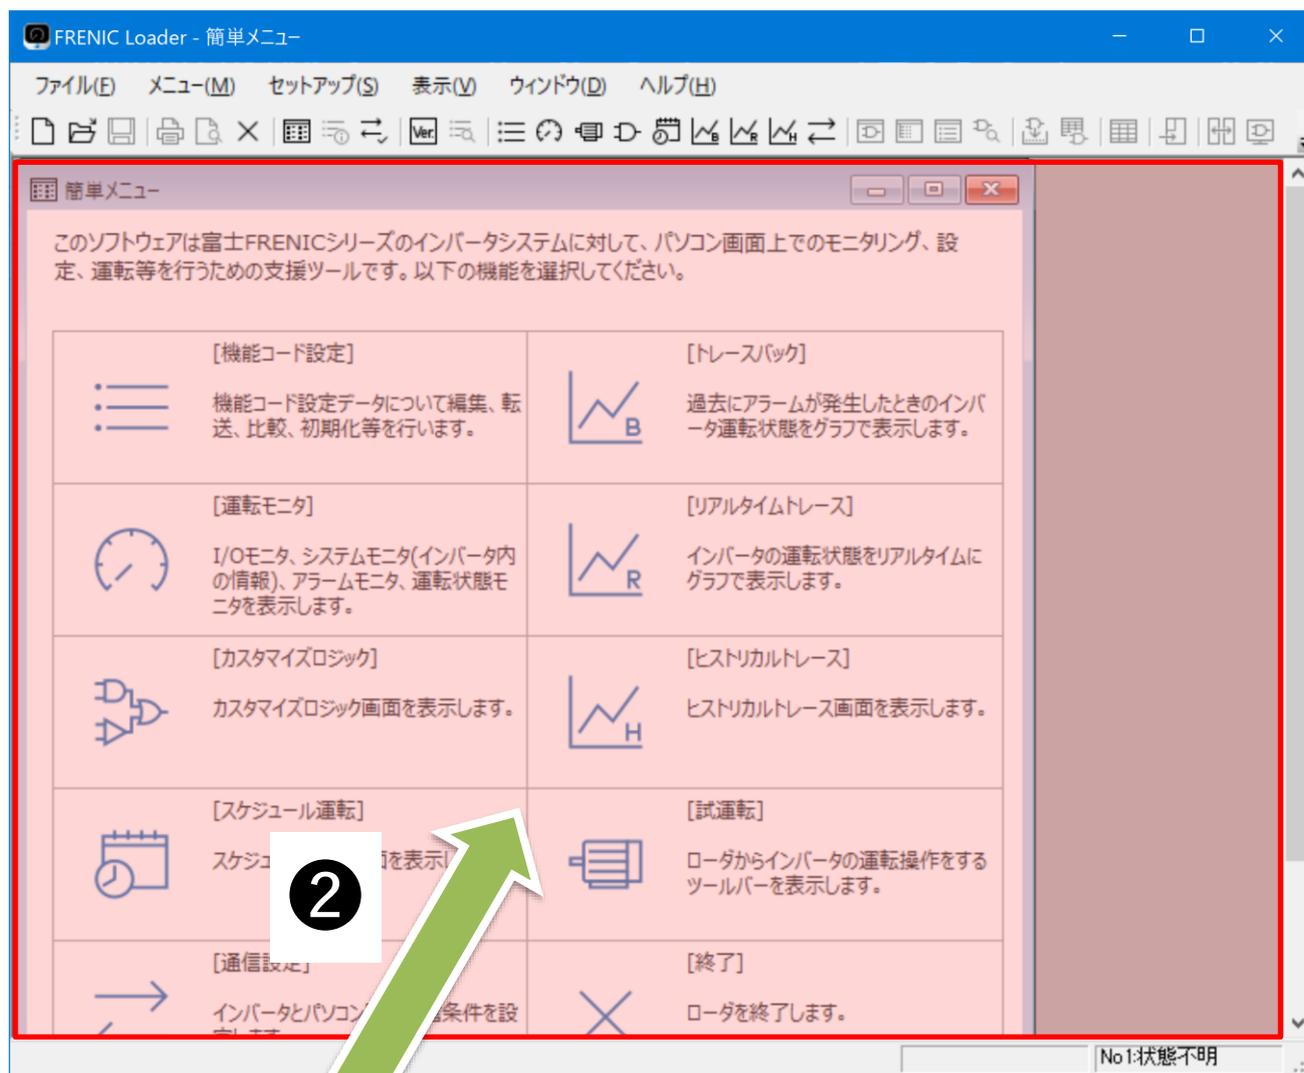

ad\*\*\*\*\*.cip

- ③ “Add-in setting”というタイトルのダイアログボックスが自動的に表示されるので、追加しようとしているアドインであることを確認します。
- ④ 問題なければ“OK”ボタンをクリックします。

注意: 追加しようとしているアドインファイル名の先頭にあるチェックボックスがチェックされていることを確認して下さい。

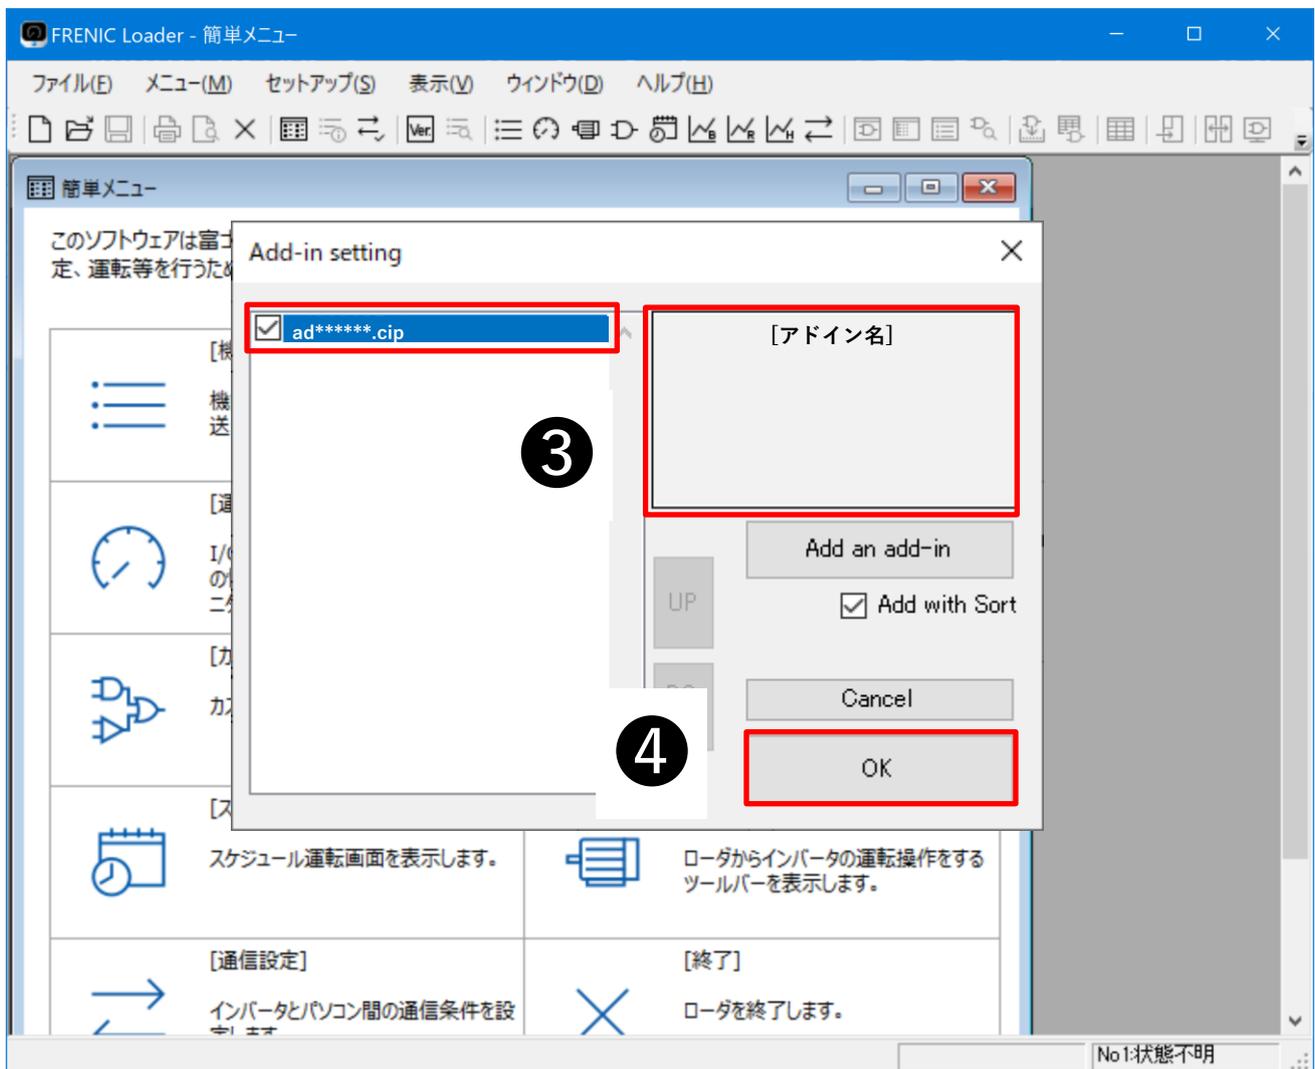


- ⑤ FRENIC-Loader4 を一度終了し再度起動することで、アドインファイルが適用されます。

### 3. アドインファイルの有効化・無効化

① FRENIC-Loader 4 を起動します。

② ヘルプ→バージョン情報→“Add-in setting”ボタンを押すと，“Add-in setting”というタイトルのダイアログボックスが表示されます。

③ アドインファイル名の先頭にあるチェックボックスにより対象アドインの有効・無効を切り替え、その後“OK”ボタンをクリックします。

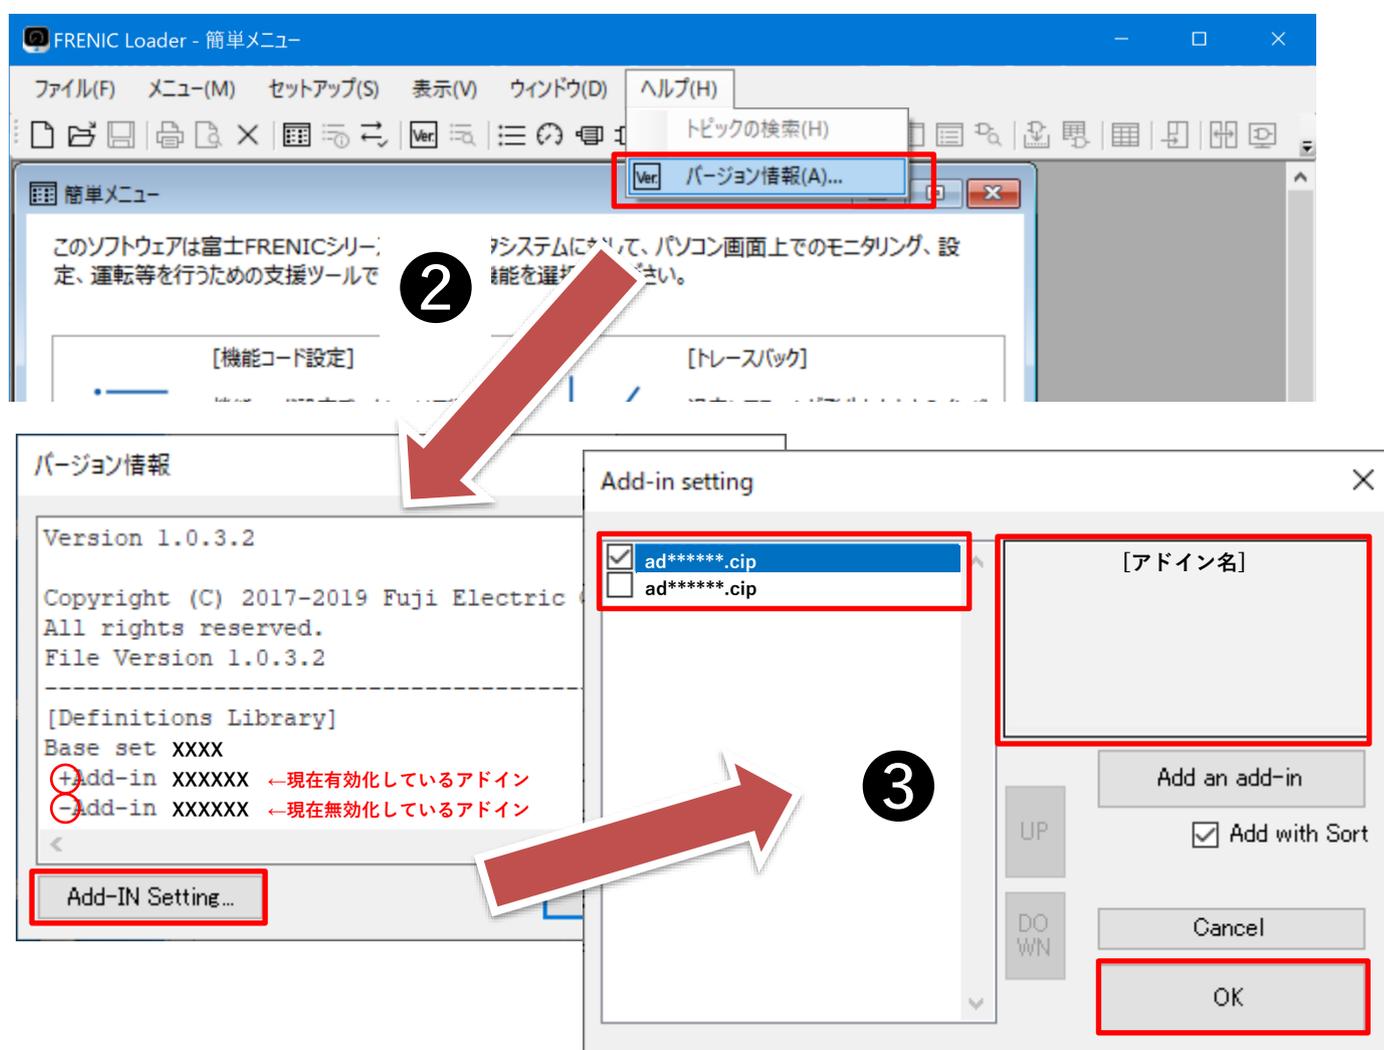

- ④ FRENIC-Loader4 を一度終了し再度起動することで、アドインファイルの有効・無効が適用されます。

## 4. アンインストール方法

### 4.1. アドインの削除

- ① FRENIC-Loader 4 を起動している場合は、終了します。

- ② ユーザードキュメントフォルダの“FRENIC\_Loader4”フォルダを開き、さらにその中の“Add-IN”フォルダを開きます。  
または、以下のパスをエクスプローラのアドレス欄に貼り付けて開きます。  
**%HOMEPATH%\Documents\FRENIC\_Loader4\Add-IN**

- ③ “Add-IN”フォルダにあるアンインストールしたい cip ファイルを削除します。



## 4.2. バックアップの復元


- ④ ユーザードキュメントフォルダの“FRENIC Loader4”フォルダを開き、さらにその中の“APP\_BACK”フォルダを開きます。

または、以下のパスをエクスプローラのアドレス欄に貼り付けて開きます。

**%HOMEPATH%\Documents\FRENIC Loader4\APP\_BACK**

- ⑤ “APP\_BACK”フォルダにあるファイル・フォルダを、FRENIC-Loader4 のインストール先フォルダに上書き移動させ、アドイン適用前の設定に復元します。

**ヒント：“APP\_BACK”フォルダ自体や中身が存在しない場合は、復元不要です。**

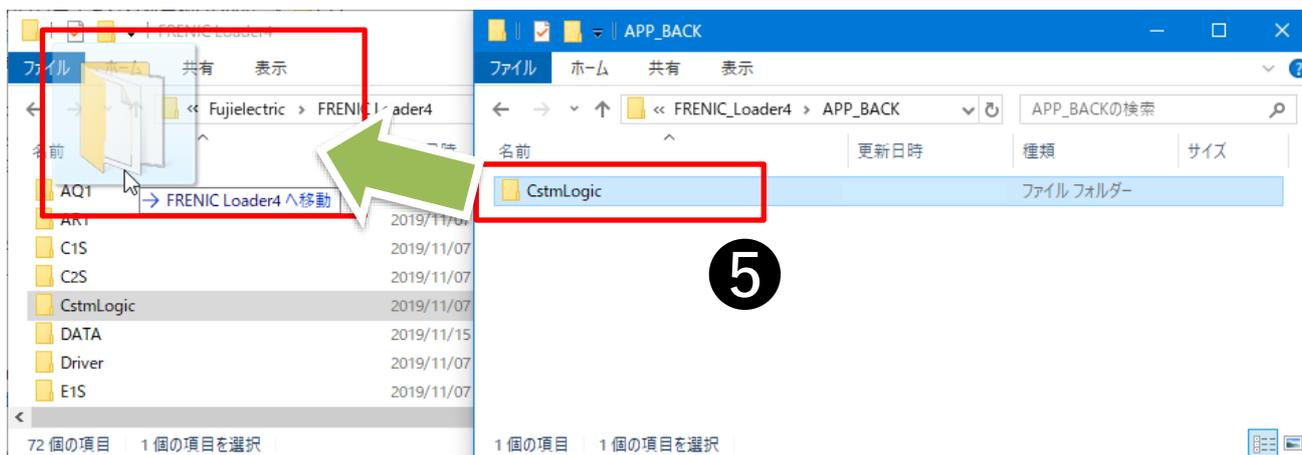

# Add-in file for FRENIC-Loader4


## 1. Information

<b>Add-in name</b>	ad000124.cip								
<b>Title</b>	Add-in 000124								
<b>Issue date</b>	17 <sup>th</sup> February 2022								
<b>Applicable version</b>	FRENIC-Loader4 version 1.1.0.32 or later								
<b>Description</b>	<p><u>Overview</u></p> <p>This add-in is provided to enable the loader software for the inverters below.</p> <table border="1" data-bbox="549 893 1434 1084"> <thead> <tr> <th>Applicable type</th> <th>Inverter ROM version</th> </tr> </thead> <tbody> <tr> <td>FRENIC-MEGA(G2)</td> <td>0300</td> </tr> <tr> <td>FRENIC-Ace(E2)</td> <td>All</td> </tr> <tr> <td>FRENIC-Lift(LM2E)</td> <td>1400,1500,1600</td> </tr> </tbody> </table> <p><u>Notices</u></p> <ul style="list-style-type: none"> <li>● When applying this add-in (ad000124.cip), please refer "2. Installation" only.</li> <li>● When applying standard specification products or other add-ins, also refer to "3. Add-in file enable / disable" and after parts.</li> </ul> <p>* When creating or reading a new function code for the loader software, an unintended inverter ROM version may be applied.</p>	Applicable type	Inverter ROM version	FRENIC-MEGA(G2)	0300	FRENIC-Ace(E2)	All	FRENIC-Lift(LM2E)	1400,1500,1600
Applicable type	Inverter ROM version								
FRENIC-MEGA(G2)	0300								
FRENIC-Ace(E2)	All								
FRENIC-Lift(LM2E)	1400,1500,1600								

## 2. Installation

① Start FRENIC-Loader 4.


② Drag and drop “ad\*\*\*\*\*.cip” file which was provided by Fuji Electric, to any place of the main screen of FRENIC-Loader 4.

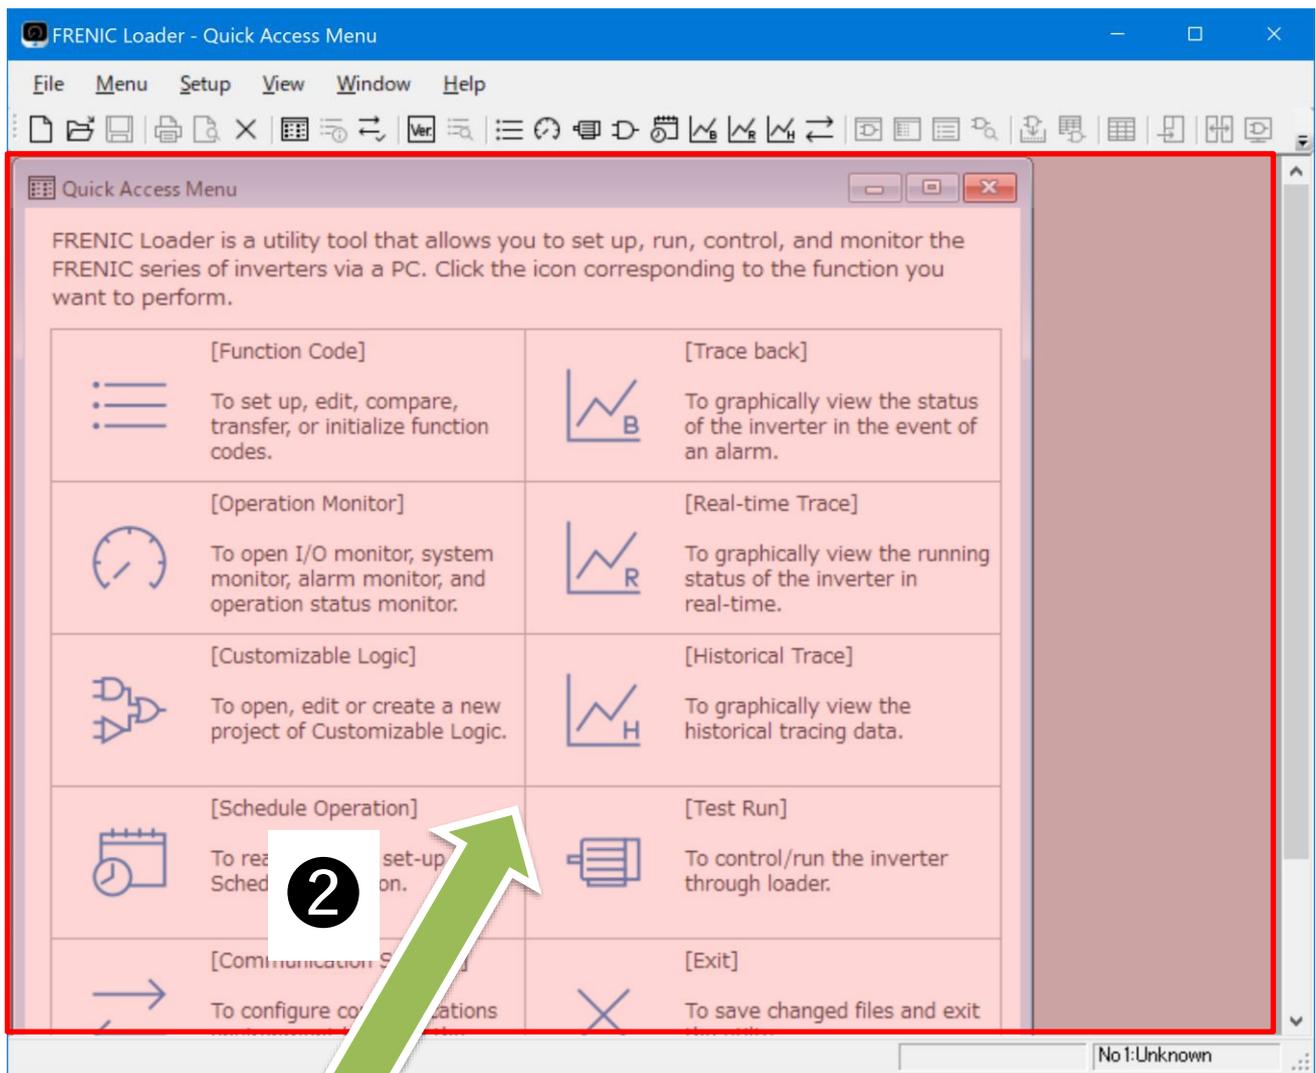

ad\*\*\*\*\*.cip

- ③ “Add-in setting” dialog pops-up automatically.  
Check the information of the definitions you’re adding.
- ④ Then click “OK” if no problem.

**NOTE: Make sure that the checkbox for the add-in file which is drag&dropped is CHECKED.**

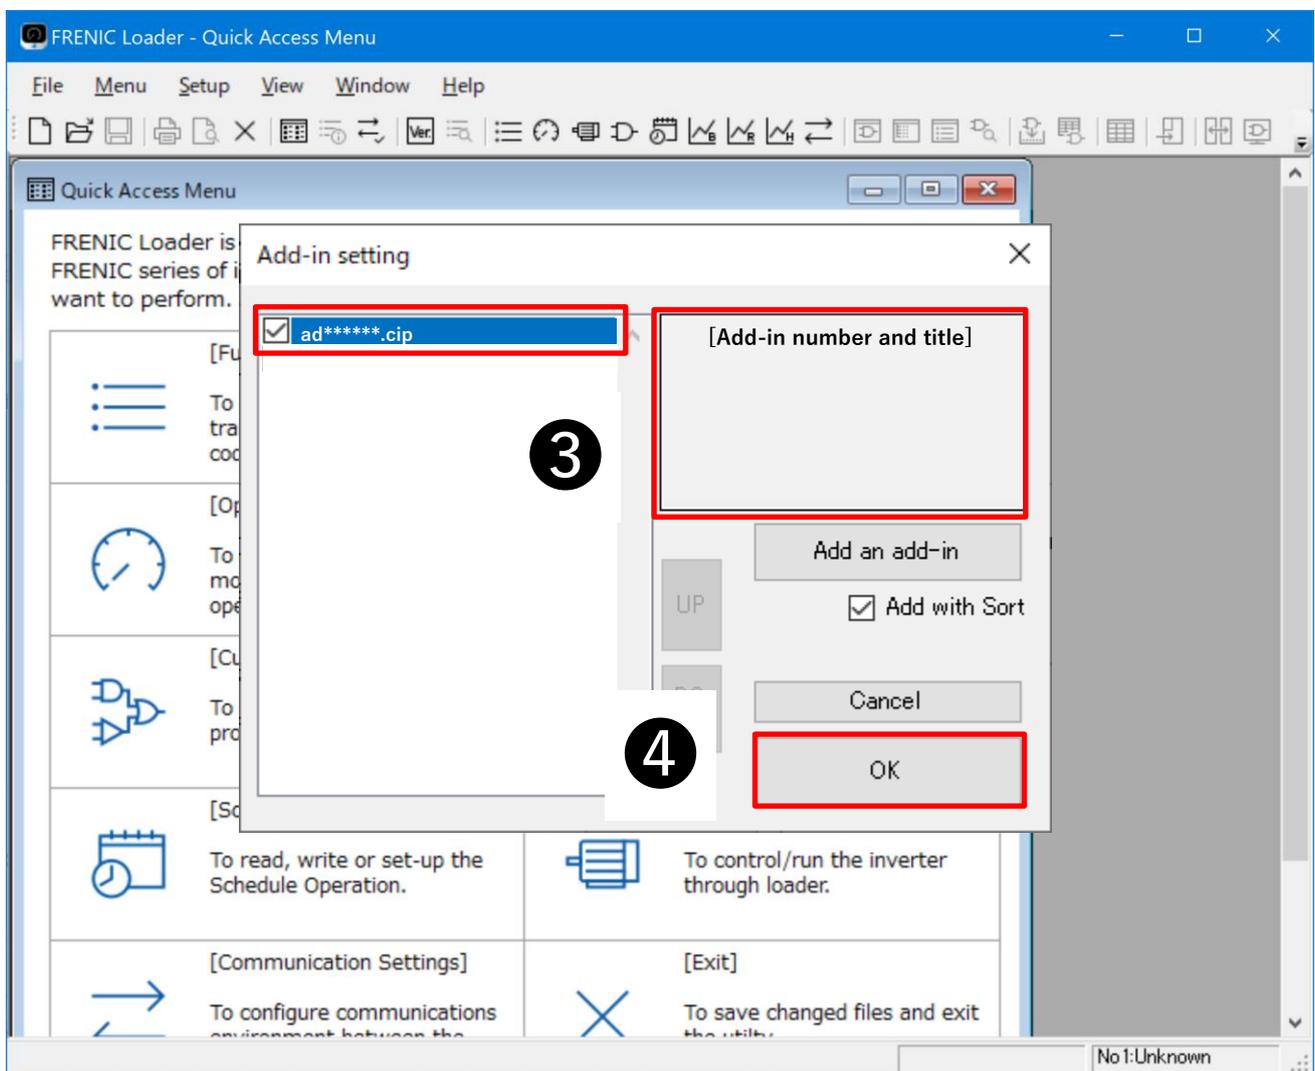


- ⑤ Close once and start again FRENIC-Loader 4 to apply add-in.

### 3. Add-in file enable / disable

① Start FRENIC-Loader 4.

② Click Help → About → "Add-in setting", dialog "Add-in setting" will be shown like below.

③ Use the check box at the head of the add-in file name to enable or disable the target add-in, and then click the "OK" button.

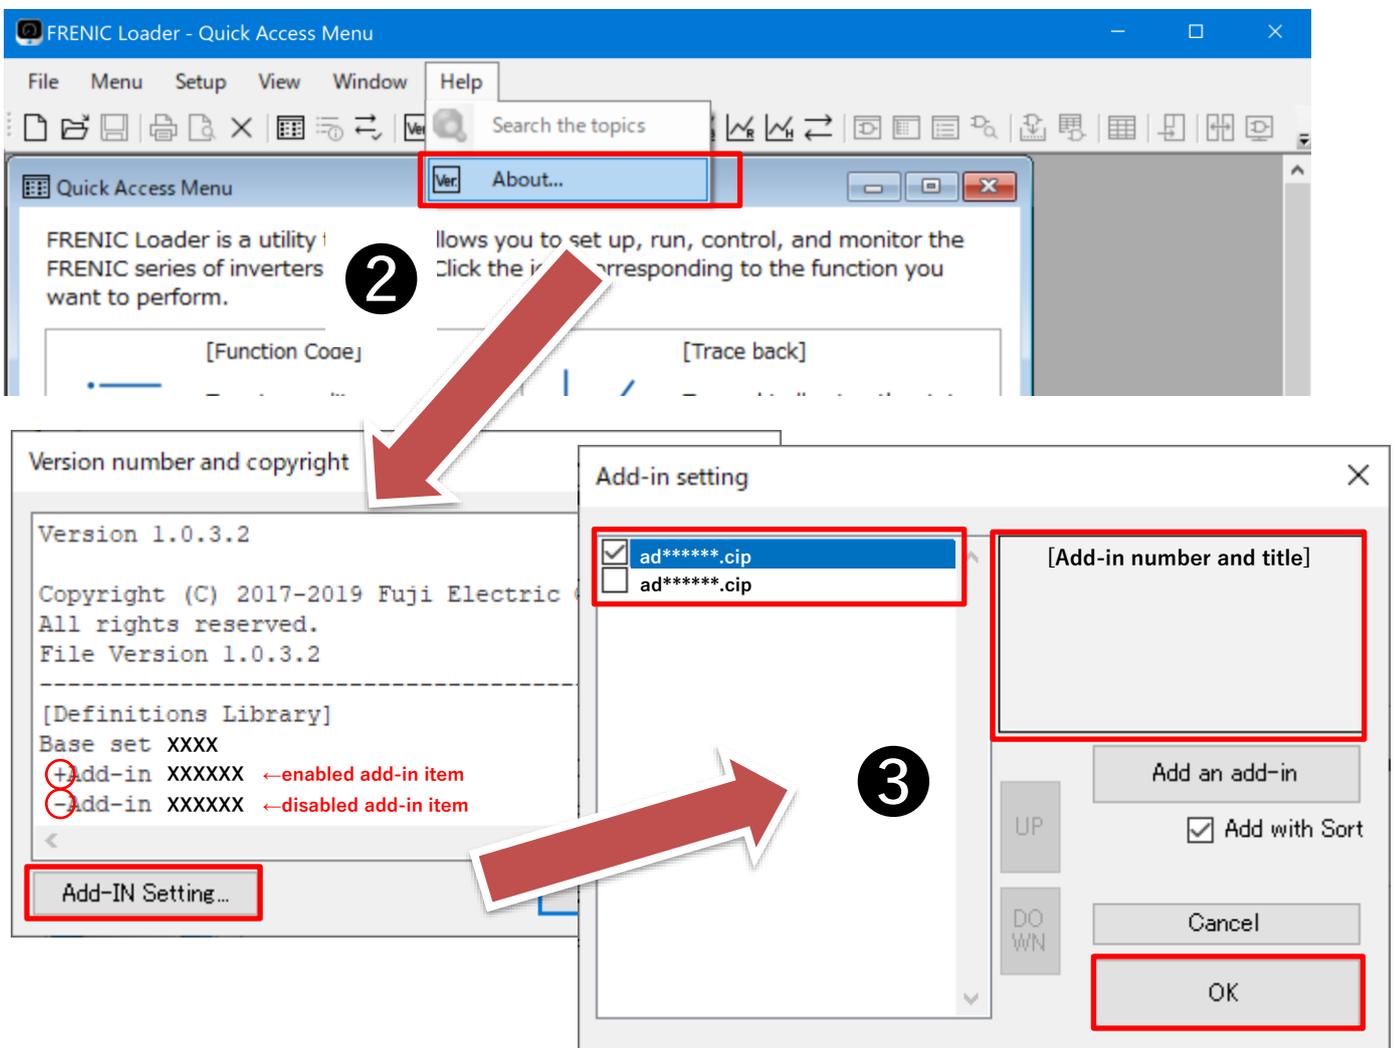

④ By ending and restarting FRENIC-Loader4 once again, enable / disable of the add-in file is applied.

## 4. Uninstallation

### 4.1. Deleting add-in

① If FRENIC-Loader 4 is running, close it.

② Open “Add-IN” directory in “FRENIC\_Loader4” directory in User document directory with Explorer.

Or, open following path by pasting it to the address box on Explorer.

**%HOMEPATH%\Documents\FRENIC\_Loader4\Add-IN**

③ Delete “ad\*\*\*\*\*.cip” file which you would like to uninstall.



## 4.2. Restoring original file from backup

- ④ Open “APP\_BACK” directory in “FRENIC Loader4” directory in User document directory with Explorer.

Or, open following path by pasting it to the address box on Explorer.

**%HOMEPATH%\Documents\FRENIC Loader4\APP\_BACK**

- ⑤ Move and overwrite all files and folders which are in “APP\_BACK” directory to the installation directory of FRENIC-Loader4, in order to restore settings before applying add-in file.

**Tip: If the “APP\_BACK” folder itself or its contents do not exist, you do not need**

